



## LIST OF PARTS

- |   |  |                                |
|---|--|--------------------------------|
| 1 Barrel                                    | 26 Trigger pull adjusting screw (A)                    | 51 Firing pin spring           |
| 2 Front sight base                          | 27 Trigger pull adjusting screw spring                 | 52 Firing pin spring ring      |
| 3 Front sight base screw (2x)               | 28 Trigger pull adjusting screw lock nut               | 53 Firing pin spring nut       |
| 4 Front sight cover                         | 29 Trigger overtravel adjusting screw (B)              | 54 Firing pin nut              |
| 5 Front sight                               | 30 Nylon pin of the trigger overtravel adjusting screw | 55 Firing pin nut pin          |
| 6 Front sight pin                           | 31 Trigger unit securing screw                         | 56 Bolt sleeve                 |
| 7 Fiber optic                               | 32 Trigger unit securing screw washer                  | 57 Cap                         |
| 8 Front sight adjusting screw A             | 33 Firing pin catch                                    | 58 Stock                       |
| 9 Front sight adjusting screw B             | 34 Firing pin catch spring                             | 59 Butt plate                  |
| 10 Rear sight base                          | 35 Sear stop   | 60 Butt plate screw (2x)       |
| 11 Rear sight base screw (2x)               | 36 Safety plunger                                      | 61 Swivel stud (2x)            |
| 12 Rear sight blade                         | 37 Roller  | 62 Sling swivel (2x)           |
| 13 Rear sight adjusting screw (2x)          | 38 Roller pin  | 63 Swivel screw (2x)           |
| 14 Receiver                                 | 39 Safety plunger pin                                  | 64 Swivel screw rest (2x)      |
| 15 Safety                                   | 40 Bolt  | 65 Trigger guard - box version |
| 16 Safety stop (2x)                         | 41 Extractor   | 66 Fastening screw, front      |
| 17 Bolt stop                                | 42 Extractor pin                                       | 67 Fastening screw, rear       |
| 18 Bolt stop spring                         | 43 Extractor spring                                    | 68 Follower                    |
| 19 Bolt stop pin (2x)                       | 44 Ejector   | 69 Follower spring             |
| 20 Trigger                                  | 45 Ejector pin   | 70 Box shell                   |
| 21 Adjusting trigger screw                  | 46 Ejector spring                                      | 71 Floor plate                 |
| 22 Trigger pin                              | 47 Bolt handle   | 72 Floor plate pin             |
| 23 Nylon pin of the adjusting trigger screw | 48 Bolt handle knob                                    | 73 Floor plate latch           |
| 24 Trigger holder                           | 49 Bolt handle pin                                     | 74 Floor plate latch spring    |
| 25 Pin (3x)                                 | 50 Firing pin  |                                |