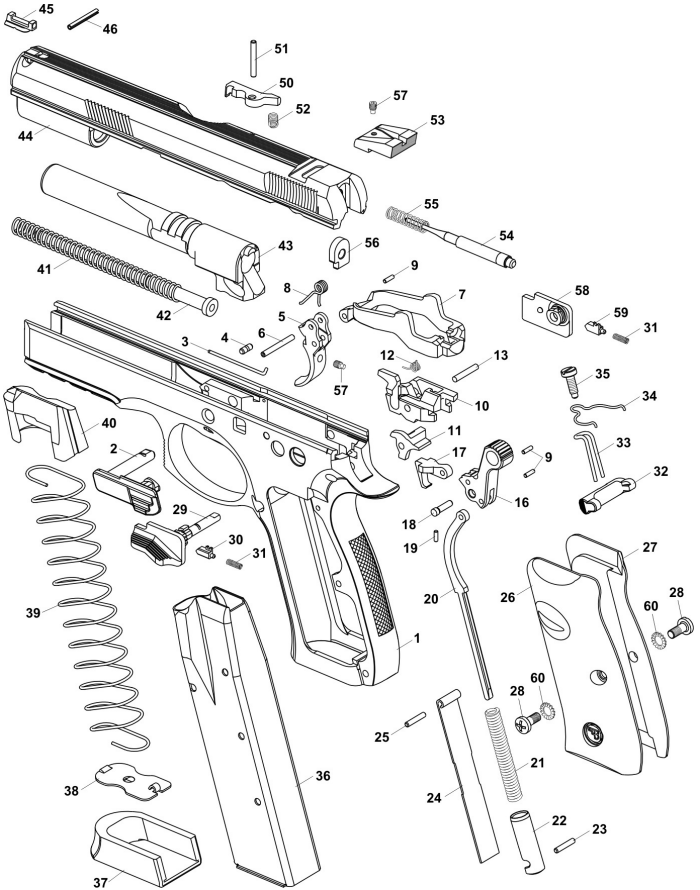
45
46
51
50
52
57
53
44
55
54
43
56
41
9
8
7
58
42
5
59
31
4
6
3
12
13
35
57
10
34
40
11
33
2
9
17
32
16
29
18
30
19
27
31
20
26
28
39
60
1
28
60
25
21
36
24
22
38
23
37

LIST OF PARTS

1 Frame *
2 Slide Stop
3 Slide Stop Spring
4 Slide Stop Spring Pin
5 Trigger
6 Trigger Pin
7 Trigger Bar
8 Trigger Spring
9 Pin (3x)
10 Ejector
11 Sear
12 Sear Spring
13 Sear Pin
14 -
15 -
16 Hammer
17 Disconnector
18 Hammer Pin
19 Hammer Pin Retaining Peg
20 Main Spring Strut
21 Main Spring
22 Main Spring Plug
23 Main Spring Plug Pin
24 Magazine Guide
25 Magazine Guide Pin
26 Grip Panel - Left *
27 Grip Panel - Right *
28 Grip Panel Screw (2x)
29 Safety - Left *
30 Safety Detent Plunger - Left
31 Safety Detent Plunger Spring (2x)
32 Magazine Catch
33 Magazine Catch Spring
34 Trigger Bar Spring
35 Magazine Catch Spring Screw
36 Magazine Body *
37 Magazine Base
38 Magazine Base Lock
39 Magazine Spring *
40 Follower
41 Recoil Spring *
42 Recoil Spring Guide *
43 Barrel *
44 Slide *
45 Front Sight
46 Front Sight Pin
47 Loaded Chamber Indicator *
48 Loaded Chamber Indicator Spring *
49 Loaded Chamber Indicator Nut *
50 Extractor *
51 Extractor Pin
52 Extractor Spring
53 Rear Sight
54 Firing Pin *
55 Firing Pin Spring
56 Firing Pin Stop *
57 Securing screw (2x)
58 Safety - Right
59 Safety Detent Plunger - Right
60 Shaped Washer (2x)

Comments:

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.